


# Assembly Instructions

## ALL PURPOSE CANOPY

### 10' through 20' Wide Systems

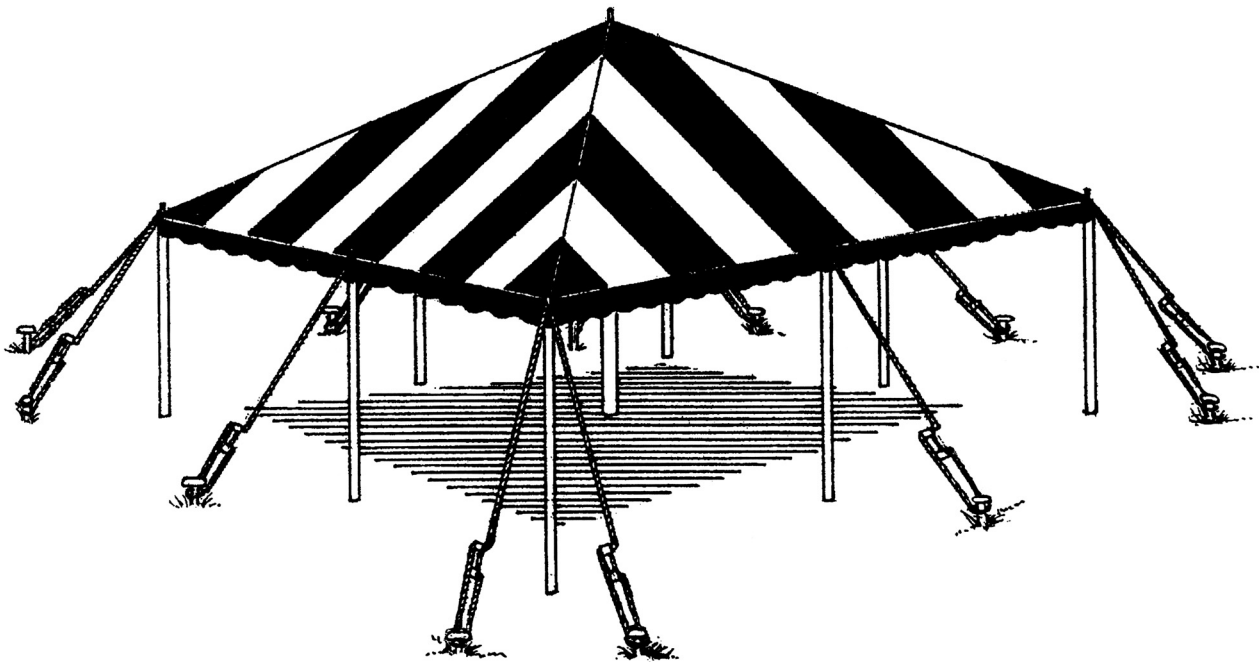

Please read all assembly / installation instructions before the installation or removal of this product.

**SALES OFFICES:**  
1100 BURCH DRIVE  
PO BOX 3477  
EVANSVILLE, IN 47733 USA

PHONE: 812-867-2421  
FAX: 812-867-0547  
1-800-544-4445  
EMAIL: [tents@anchorinc.com](mailto:tents@anchorinc.com)  
[www.anchorinc.com](http://www.anchorinc.com)




**PRODUCTION FACILITIES:**  
EVANSVILLE, IN

# ALL PURPOSE CANOPY PARTS LIST

PARTS	CANOPY SIZE											
	BASE CONFIGURATION				HARD (ASPHALT)** OR VERY STIFF** SOIL				STIFF** SOIL			
	10' x 10'	12' x 12' THRU 20' x 20'	20' x 30'	20' x 40'	10' x 10'	12' x 12' THRU 20' x 20'	20' x 30'	20' x 40'	10' x 10'	12' x 12' THRU 20' x 20'	20' x 30'	20' x 40'
SIDE POLE	4	8	10	12	4	8	10	12	4	8	10	12
CENTER POLE	1	1	2	3	1	1	2	3	1	1	2	3
5/8" x 24" STEEL STAKES	8*	12*	14*	16*	8*	12*	14*	16*	8*	12*	0	0
1" x 30" STEEL STAKES	0	0	0	0	0	0	0	0	0	0	14*	16*
CARABINER	0	0	0	0	0	0	0	0	0	0	14	16
BAG WITH TOP	1	1	1	1	1	1	1	1	1	1	1	1
BAG FOR POLES	1	1	1	1	1	1	1	1	1	1	1	1
BAG FOR 5/8" x 24" STAKES	1	1	1	1	1	1	1	1	1	1	0	0

**\* IMPORTANT NOTE:** REFER TO CAUTION STATEMENT #2 FOR IMPORTANT WARNING ABOUT NUMBER OF STAKES SUPPLIED. (SEE BACK PAGE OF THIS MANUAL)  
**THE INSTALLER MUST USE THE LOCAL SOIL CONDITIONS TO CALCULATE THE ACTUAL NUMBER OF STAKES REQUIRED AND IS RESPONSIBLE FOR THE STAKING PATTERN AND CONFIGURATION. SEE CHART ABOVE FOR STIFF, VERY STIFF AND HARD (ASPHALT) SOIL STAKING LAYOUTS.**

**\*\*** THIS REPRESENTS 1 OF 6 SOIL CONDITIONS REFERENCED IN THE IFAI GUIDE: "PULLOUT CAPACITY OF TENT STAKES". YOUR SOIL CONDITION MAY DIFFER. THEREFORE, DIFFERENT STAKING REQUIREMENTS WILL RESULT. ANCHOR INDUSTRIES RECOMMENDS ERECTING TENTS ONLY IN THE ABOVE-MENTIONED SOIL CONDITIONS.



## MANPOWER REQUIRED

Two installers should be able to assemble an All Purpose Canopy in approximately thirty minutes.

## TOOLS REQUIRED

Sledge Hammer

## INSPECT SITE CAUTION:

Consult your local utility locator service or the National Utility Locating Contractors Association (NULCA) prior to installation. Prior to actual tent assembly, be sure to look up, down, above & below for obstacles, pipes, wires, trouble, etc.

## LAYOUT & CHECK


Use parts list for a quick identification and check list for proper quantities.

## 1. LAYOUT AT SITE

20' x 20' canopy used as example. Spread drop cloths and unroll canopy at exact position of desired finished assembly. Any sharp objects which must remain on site under the canopy should be padded and taped.

Assemble side poles and lay straight out from each pole hole in canopy. Drive a stake 1'-0" in from the end of each pole. The stake must be driven through the ring attached to each guy rope as shown.

Note that stiff soil conditions require the 1" stake with carabiner on some of the tents. See chart on page 2.

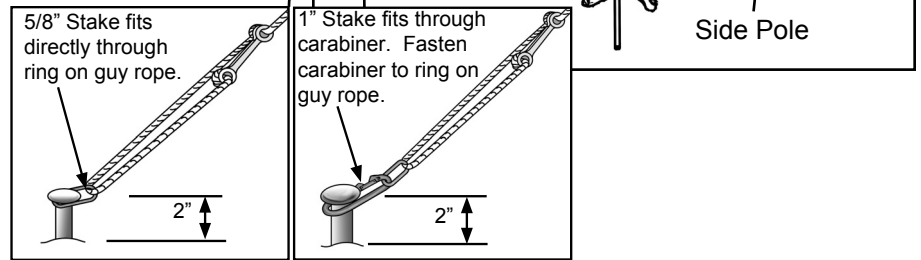


## 2. RAISE SIDE POLES

Start at opposite corners.

Insert side poles into pole holes and raise so that bottom of poles slant toward center of canopy.

Adjust guy rope.


Continue with other two corners and then sides.

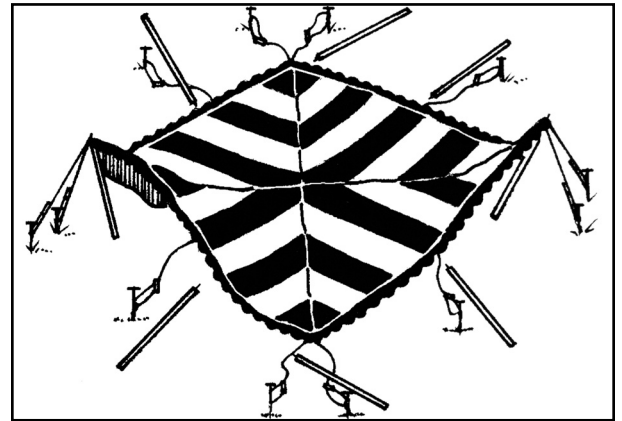

## 3. RAISE CENTER POLE

Assemble three-piece center pole and insert into center pole hole.

Raise to upright position and tie off jump rope to pole.

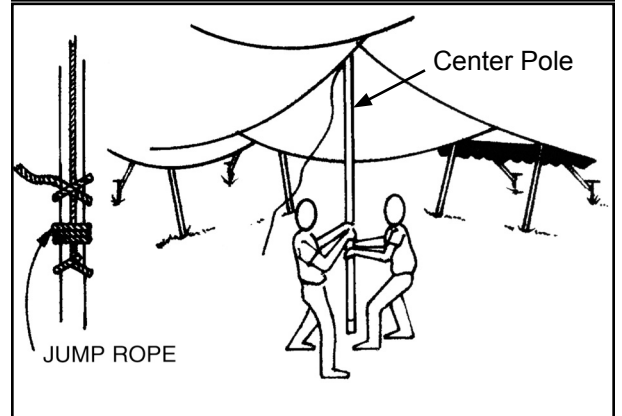

## 4. SIDE POLE ADJUSTMENT

Tighten guy ropes and then set side poles to upright position.

Adjust pole positions and guy rope tension to properly pull out canopy.

Protective covers are recommended for all stakes.

## 5. TAKE DOWN


Loosen all guy ropes.

Spread drop cloths.

Reverse steps 1 through 4 for disassembly.

### **Important:**

Check guy ropes periodically for tightness and good condition.

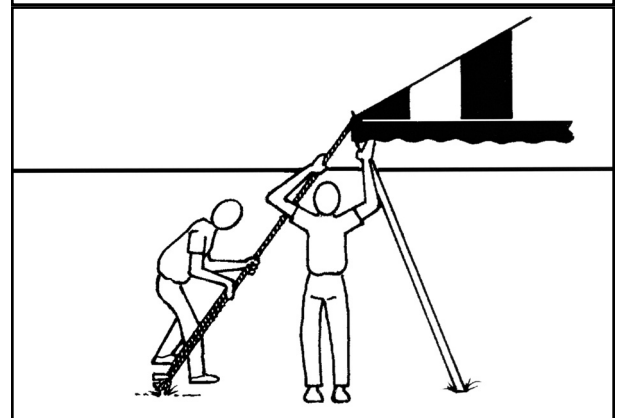



PHONE NUMBER  
812 · 867 · 2421

FAX NUMBER  
812 · 867 · 0547

Anchor products are of superior design and operate best within the parameters of these instructions. It is imperative that the instructions be carefully read and **COMPLETELY FOLLOWED**. Please read installation instructions before the installation or removal of this product. Installation instructions are available online at [www.anchorinc.com](http://www.anchorinc.com) or by calling 1-800-544-4445.

### **CAUTION:**

1. For each installation, the installer is solely responsible for evaluating the site and the proper securing method determined. Some soils require different staking or securing than that provided with the tent. Due to this variety of soil conditions, these are the manufacturer's suggested sequence of installation procedures. Anchor's responsibility is limited to the manufacture of the tent parts and materials. We are not responsible for methods that installers may choose to erect and secure the tent to the ground.
2. The number of stakes suggested in the installation instructions does not necessarily meet all or any relevant codes on the site of the tent installation. The number of stakes suggested **will, in many cases, keep the tent erected**, however, due to various soil conditions; these stakes will be insufficient **to keep the tent secure in high winds**. It is the tent installer's responsibility, not the manufacturer, to determine the appropriate number of stakes to meet the necessary wind loads on the site. Regardless of the number of stakes we suggest, we make no representation or warranty as to whether this specific number of stakes will meet the local tent code. Anchor does not, nor can it make any suggestions, representation, or warranties about the adequate staking required at each specific installation site. Staking information provided in the installation instructions **is not a suggestion about what is necessary to meet a site-specific load**.

**For additional important information, consult: "The IFAI Procedural Handbook For the Safe Installation and Maintenance of Tentage" and the IFAI Pocket Guide "Pullout Capacity of Tent Stakes", both available from the IFAI Tent Rental Division or on our website.**

3. Inasmuch as the weather is unpredictable, good judgment and common sense must be incorporated within installation guidelines. It is the responsibility of the tent installer/maintainer to determine the severity of the weather, proper time and method of installation and/or erection and disassembly. **Note: We recommend that snow and ice be removed from the tent surface as soon as possible because accumulation will damage the tent or fabric structure. Please consult with our Engineering Department about the maximum loads for each product.**

This product has been manufactured for use as a temporary sunshade structure. For the safety of all occupants, evacuation is recommended if threatening weather occurs, or if there is any doubt concerning the safe use of this product.

4. Proper safety equipment should be used at all times to insure a safe installation and take down. We suggest a careful evaluation be made to determine safety equipment needed, such as hard hats, steel-toe shoes, safety glasses and other as required. It is our desire that all installations are safe. Please be aware of hidden dangers both underground, i.e., gas lines, water lines, electrical lines, etc. and above the tent such as power lines and telephone lines.
5. Anchor stands behind its products in accordance with its standard Terms and Conditions of sale. A copy of our Terms and Conditions of Sale can be obtained by contacting Anchor at the telephone number and/or address on this document.